

PROGRAM DISK (MODE)

The manipulation of the program disc is done by an installed transparency driver disc. It is possible to lift on this disc about 1mm, for easier setting to the program disc of the camera. Installing the camera, keep attention, that the driver disc clics into place by carefully closing the housing. By pressing down and turning the turnable control knob the program disc can be set. If there is no contact to the camera body you can adjust the disc by a IS screw. **Take care not to press too strong – the display window can be pushed out.**
Clean the rubber parts on the dials at the camera and housing time by time with alcohol !

EXPOSURE CONTROL (ME) / FUNCTION KNOB (FUNC)

Both settings can be done with the small lever below the viewfinder. The lever has a stop only in the lower position. Both knobs at the camera are very close together. Therefore it is necessary to put the setting lever into a parking position to avoid unintentional settings. It is possible to place the setting lever between the two knobs at the camera, or better to turn the lever in a vertical position.

OTHER TRANSMISSIONS

All other transmissions are indicated with inscriptions at the housing. All transmissions are turnable, some are self resetting and therefore without problems. **Dont operate the springy levers, without the camera installed !**

LEAK DETECTOR

If a leak detector is installed in your housing, you can test it as follows: Make one of your fingertips wet and press it on the both contacts below the camera table - an interval warning sound is to hear. If you cannot reach the contacts - use a needle. The current consumption is very low - only during the warning sound, that you have to change the 9 V battery when there is no more function (2 years). If water entered the housing, disconnect the battery, clean the housing with sweet water and dry it carefully. Blow out the sound-opening at the detector and the contacts - the warning sound will stop

ZOOM / FOCUS GEAR MOUNTING

The zoom / focus lens gear must have a specified position on the lens not to get out of gearing. Put the zoom at the long focal length (105/80/70mm). Then push the gear (tooth at the side of the camera body) on the lens. Push the gear harmonious and carefully on the lens. Pay attention for a full gearing between the lens gear and the housing gear.

GENERAL

If you have any question, make a telephone call we like to help you. Our phone numbers are: tel. + 3142 / 228850 fax. + 3142 / 228854